

# PARTITIONING SYSTEMS

## Pedestal Mounted

### Installation Guide

#### Requirements

A 'check' measure must be completed before ordering systems to ensure correct, accurate installation.

Pre-conditioning of **polytec's** Partitioning Systems is recommended. Expose the product to their final environment for as many days as possible before installation, as changes in relative humidity can mean dimensional changes in the panels. The recommended minimum period is five days.

#### Processing

**polytec's** Partitioning Systems are supplied with panels and components accurately cut and almost completely pre-drilled. In the event further processing is required, **polytec's** Partitioning Systems can be cut, drilled and machined using standard woodworking tools. Cut edges can be lightly sanded. In order to maintain the black core of the Partitioning Systems, an oil such as linseed oil will protect and enhance the edges.

#### Installation

Installation instructions are included with each **polytec** Partitioning System supplied.

Ensure all windows are positioned in between cubicles and make sure they do not interfere with any wall fixings. The door should be able to swing freely.

Partitions should line up with floor and wall tiles, along with avoiding obstruction to light fittings and air conditioning ducts. Measure partitions accurately to ensure they fall within these points, while also checking walls for plumbing, and floor level.

#### Fixing

**polytec** Partitioning Systems are supplied with all hardware and extrusions (excluding screws required to anchor Partition to walls).

Correct pilot holes are essential to avoid splitting. They should be 2mm longer than the screw used and should be approximately 90% of the screw core diameter.

Care should be taken not to pre-drill holes through to the other side of the panel, particularly with 13mm Compact laminate.

When drilling the pilot hole, please limit pressure on the drillbit as excessive pressure can cause the far side of the panel to push out.

#### Assembly

The standard aluminium foot assemblies, including screws, are provided with the **polytec** Partitioning System. The floor level should be checked before installation. Support blocks are supplied with the Partitioning Systems for levelling the panels prior to fixing the foot assemblies into place.

Check the leg height against the support blocks prior to installation, ensuring the support blocks are positioned at the correct height.

#### Storage & Handling

Storage area should be an enclosed space, protected from moisture and heat, away from direct sunlight. When moving product, ensure care is taken to avoid scratching of the decorative surface. Ensure the pooling of water on the surface cannot occur and allow sufficient ventilation and drainage in enclosed spaces.

All packs should be evenly supported at each end, at intervals of no more than 600mm wide. All supports should be vertically aligned where packs are stacked. Minimise leaning panels against walls vertically to avoid bowing.

#### Care & Maintenance

To maintain the antibacterial effectiveness of **polytec's** Partitioning Systems, the surface should be kept clean. Provided that good hygiene practices are followed; the antibacterial certified surface will be sustained for the expected life of the product. It is recommended after general cleaning; the Compact laminate surface should be wiped down with isopropanol.

**polytec's** Compact laminate has been independently tested in accordance with industrial standard JISZ2801 test for antibacterial activity and efficacy.

Always ensure that you refer to the recommendations provided by the cleaning product manufacturer before use.

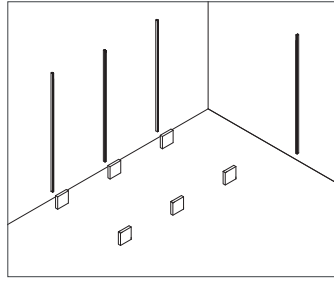
**polytec**

[www.polytec.com.au](http://www.polytec.com.au)

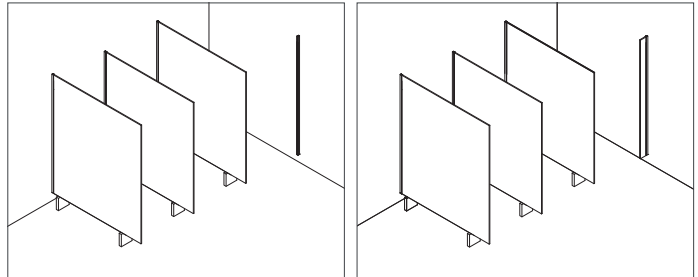
p 1300 300 547

**STEP 1**

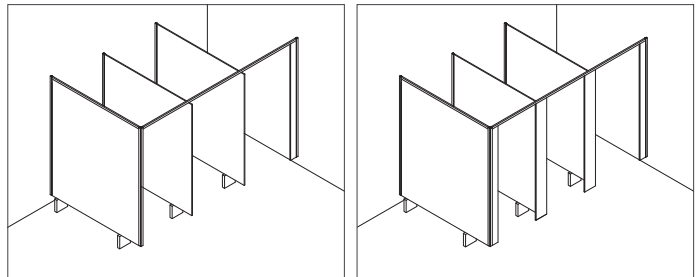
- Considering the supplied legs have adjustment, establish the level of the existing floor.  
Levelling blocks are supplied to help aid the installer. Place the blocks on the floor in position of the divisional panels and pack so they are level with the highest point on the floor, these blocks correspond with the leg height and will determine the position of the rear channel.
- Ensure wall channels are set into position according to measurements, channels are set level and plumb.
- Screw the Division and End Nib Channel to the rear and side walls. Please note: **polytec** do not supply the screws, installer needs to supply.

**STEP 2**

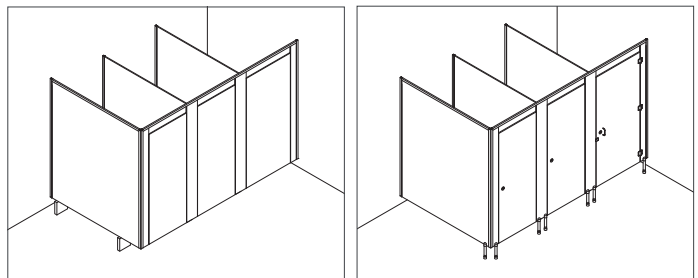
- Begin placing the divisional panels into the rear wall channels supported on levelling blocks.
- Do not screw the divisional channels in completely, as adjustments may be needed later to line up the doors and front panels.
- Plumb and fix the end nib into the side wall channel.

**STEP 3**

- As per plan, fit wall channel to frontal.
- Fit the frontal nib to the divisional partitions and fix.
- Cutting the head rail to desired length, place this into position over the nib and frontals. At this stage, only screw head rail to nib.
- Place the Infill Cap between first frontal and end nib.
- Pushing frontal hard against the insert, secure headrail to frontal. Be sure to allow two screws per frontal and repeat for remaining partitions.

**STEP 4**

- For Pedestal mounted systems:** Fix plate to floor once the leg position has been located. Leg can be removed via grub on side of base. Refit leg to base and fix to the partition.  
**For all other systems, attach the panels to the floor via the supplied extrusions.**
- Fix the hinges and hang doors. Using three screws, secure all divisional panels to the rear channel. Adjust the spring pressure in the bottom hinge until the door operates as desired.
- Install the indicator locks, bumpers, hook & handles.



**NOTE:** Do not over tighten door lock screws as excessive force can damage the mechanism and prevent locks from functioning properly. The safest method is to hand tighten screws on all door locks, do not use a drill.